 


mimi moto®
clean cooking for all

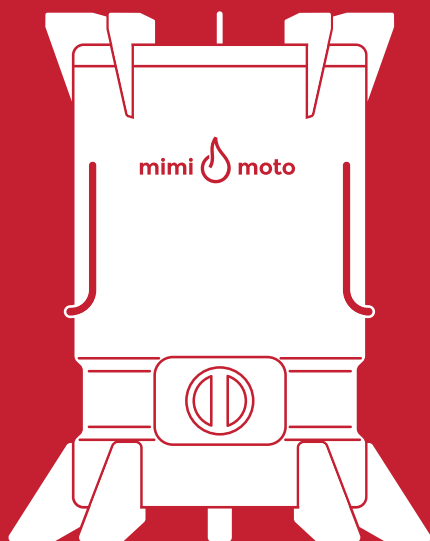

User Manual





**For terms and conditions please
visit: mimi-moto.com/terms**


version: 09-2016

Notes	5
Assembly of feet and pan support	6
Notes	7
Lighting and extinguish the stove	8
To continue cooking when only glowing embers are left	10
What if the stove is producing a lot of smoke?	11
Stoves without battery pack	12
Stoves with built-in battery pack	13
Warnings	14

  Components

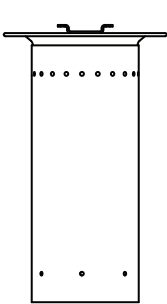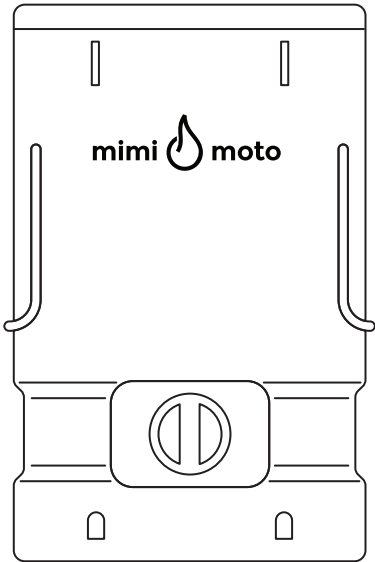

small
burner

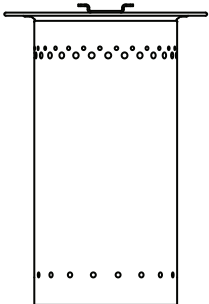 


large
burner



5 feet




 5 pan
supports

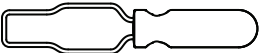


burner handle

 
OPTIONAL

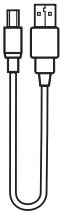

USB cable

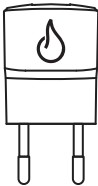 

power
adapter




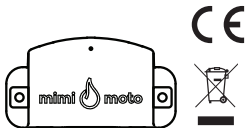 


LiFePO4 3.2V 5000mAh

battery
pack

[illegible]

    
Assembly of feet and pan support

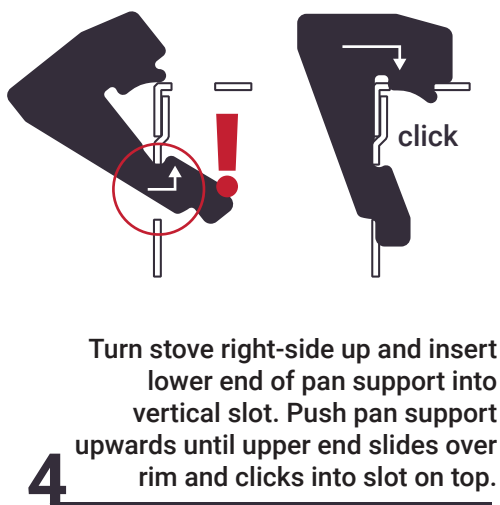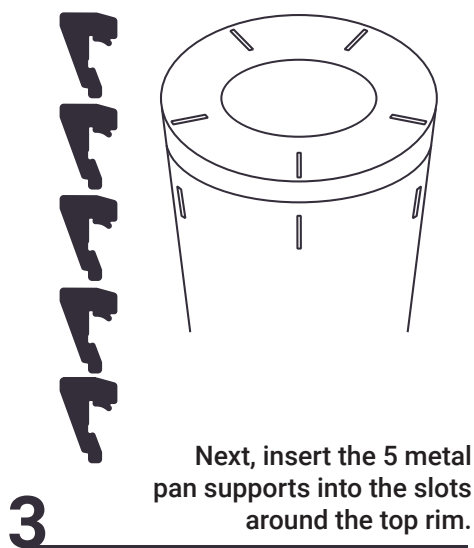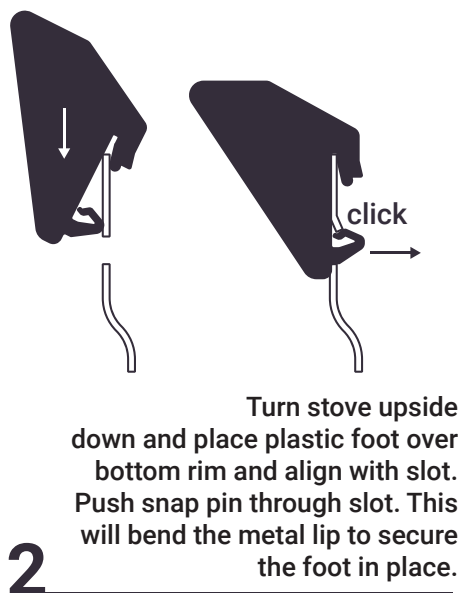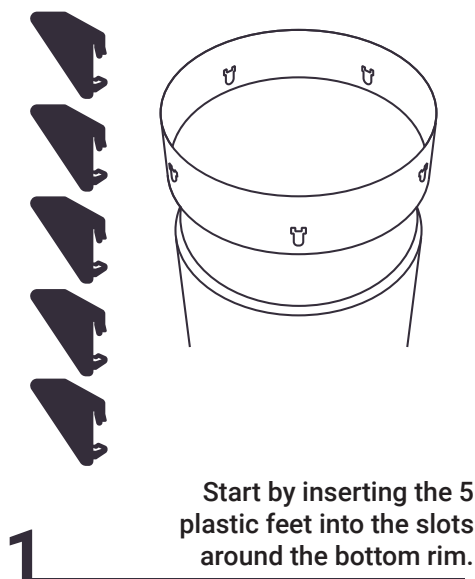

Notes

[illegible]

 How to Light and extinguish the stove

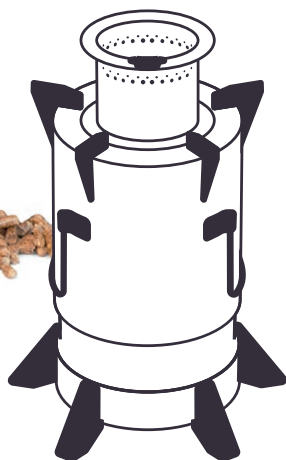

Fill burner with fuel and lighting material and place in stove

1



 
Leave 1cm between fuel and upper holes of burner



2




Light fire

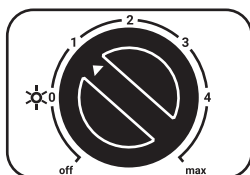

3

 Turn fan on. Adjust fan to speed 1 to get a good flame going

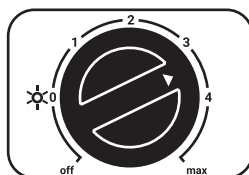


4

When you have a well-burning, circular flame, adjust fan speed to between 3 and 4


Attention: We recommend that you DO NOT run the fan at it's highest speed!

Maximum fan speed will increase the intensity of airflow, resulting in:

 
- short battery life
- inefficient flame
- inefficient pellets use
- more pollution

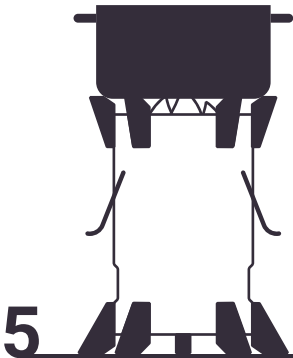

Start cooking

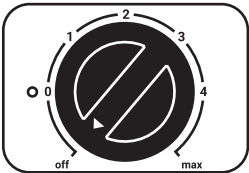 

 Use stove until all flames have extinguished and only glowing embers are left

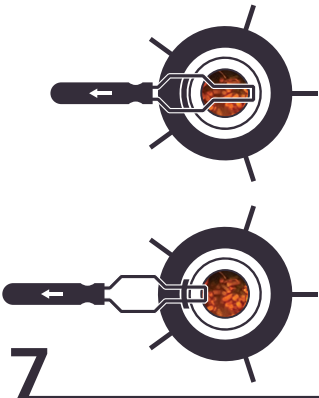


Attach burner handle and remove burner





Empty burner into a fireproof container with lid

 
To continue cooking when only glowing embers are left

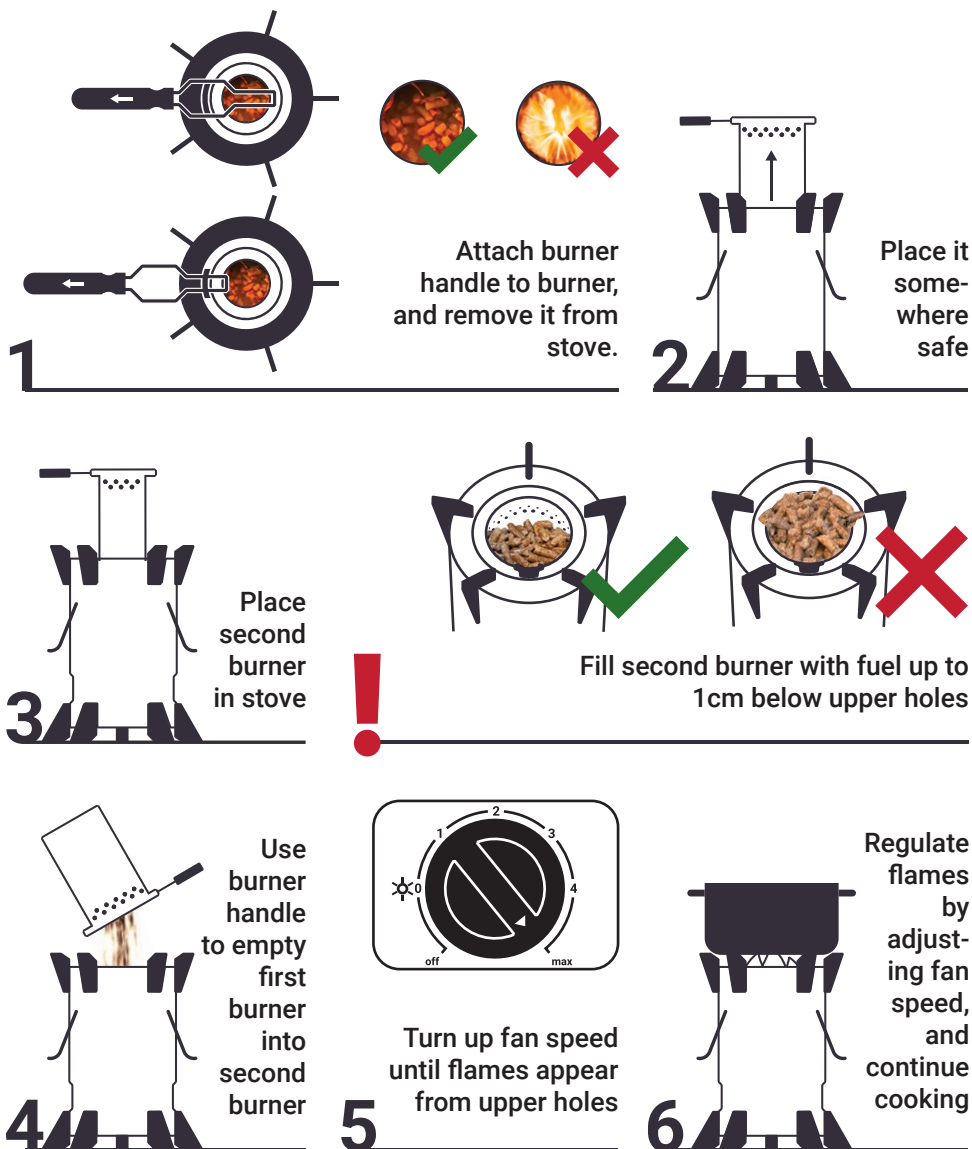

  What if the stove is producing a lot of smoke?

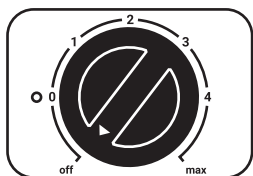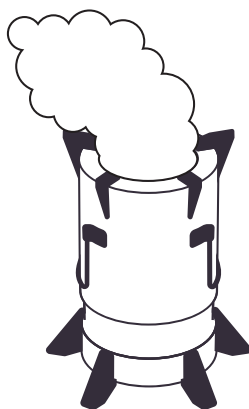

 Turn fan
off, stop
cooking
and avoid
inhaling
smoke

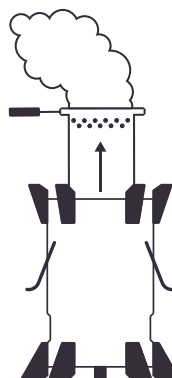


Use burner
handle and
carefully lift out
burner




Place burner outdoors,
or empty burner into
a fireproof container
with lid and place
outdoors

 Stoves WITHOUT battery pack

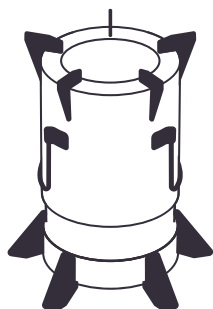

Your stove package includes a USB cable

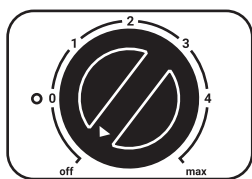 


To use fan, plug the USB B end into control panel

1



Plug USB A end into a device with a compatible USB port (phone charger, power bank, etc.)

 
2

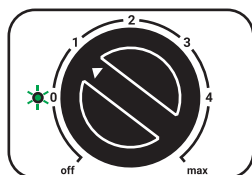


When you turn the fan on, this will be indicated by a green LED light

3

 
Stoves WITH built-in battery pack

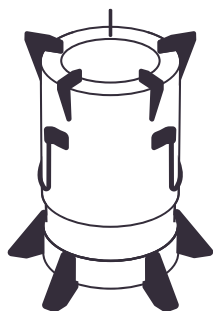

 Your stove has a built-in battery pack. The package includes a USB cable.

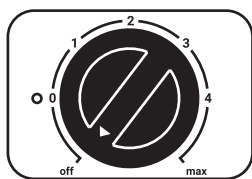

 To charge battery, plug USB B end into control panel

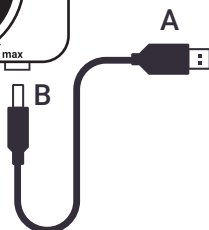


1




Plug USB A end into a wall socket.

 2A

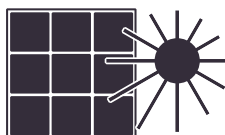


Or plug it into a solar panel that is placed in the sun.

 2B

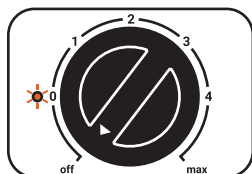

A red LED light indicates battery is charging. When it turns green, battery is fully charged.



 
3

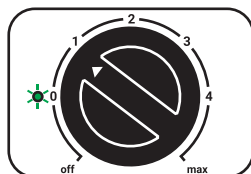

A green LED light indicates fan is running on battery power. When it turns orange, 80% to 20% power remains. When it turns red, less than 20% power remains, and battery should be recharged.

4

   Warnings

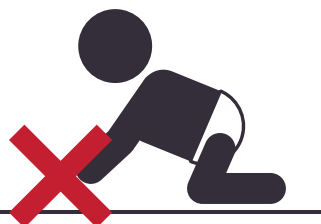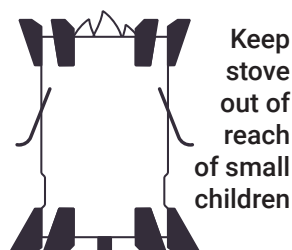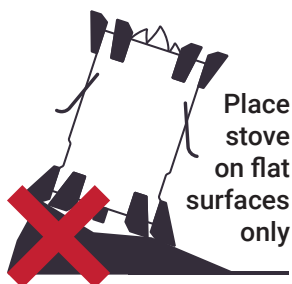

Warnings

